

 
SHARP

香港電器安全規格
(國際電工委員會規格適用)

MODEL 型號

SJ-FR23C

REFRIGERATOR-FREEZER
OPERATION MANUAL
原裝進口雪櫃
使用說明書

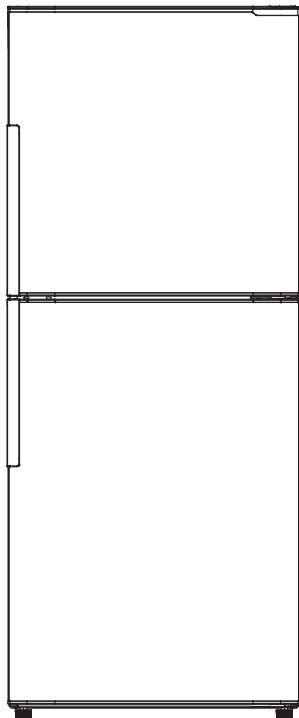

CONTENTS

• WARNING	2
• CAUTION	2
• BEFORE OPERATION	3
• DESCRIPTION	4
• OPERATION	4
• CARE AND CLEANING	6
• BEFORE CALLING FOR SERVICE ...	6

Thank you very much for buying this SHARP product. Before using your SHARP refrigerator, please read this operation manual to ensure that you gain the maximum benefit from it.

目錄

• 警告	7
• 安全注意事項	7
• 使用之前	8
• 各部件名稱	9
• 使用方法	9
• 保養和清潔	11
• 送修之前的初步檢查	11

感謝您購買SHARP產品。在使用SHARP雪櫃之前，為使您能夠充分使用您所購買的雪櫃，請仔細閱讀本使用說明書。

WARNING



冷媒 異丁烷 Iso-butane R600a
此冰箱必須由受過訓練的技師在工場進行維修。
Maintenance work of the refrigerator must only
be carried out at workshop by well-trained
maintenance worker.

1. This refrigerator contains flammable refrigerant (R600a: isobutane) and insulation blowing gas (cyclopentane). Observe the following rules to prevent ignition and explosion.
 - The refrigeration system behind and inside the refrigerator contains refrigerant. Do not allow any sharp objects to come into contact with the refrigeration system.
 - Do not use other electric appliances inside the refrigerator.
 - Children should be supervised to ensure that the refrigerator should be used properly.
 - Do not use mechanical devices or other means to accelerate the defrosting process. (This refrigerator has adopted automatic defrosting system.)
 - Do not block the openings on the circumstances of the refrigerator.
 - In case of having damaged the refrigerant circuit, do not use electric items or fire equipments nearby, and open all windows to provide good ventilation. Please contact service agent approved by SHARP for servicing.
 - The warning labels should be kept throughout the life of the refrigerator. The user manual should be handed over to any person who would use or handle the refrigerator whenever the refrigerator would be transferred to another location and delivered to a recycling plant.
 - Use only the specified lamp for the refrigerator compartment.
 - This refrigerator should be disposed appropriately. Take the refrigerator to a recycling plant for flammable refrigerant and insulation blowing gases.
2. This refrigerator is airtight. TO PREVENT FATAL ACCIDENTS TO CHILDREN, please completely remove the doors prior to discarding the refrigerator.
3. Highly volatile and inflammable materials such as ether, petrol, propane gas, adhesive agents and pure alcohol etc. are liable to explode. Do not store these materials in the refrigerator.
4. To prevent damage to the outer cabinet, avoid contact with lacquer, and paint, etc.
5. When cleaning your refrigerator, do not splash water directly on the outer cabinet or the interior. This may lead to rusting and deterioration of the electrical insulation.
6. When cleaning any areas adjacent to electrical components, unplug the refrigerator first to prevent electric shock.
7. Should electrical components be accidentally immersed in water, unplug the refrigerator, dry the parts and contact your nearest service agent approved by SHARP.
8. When disconnecting the power plug, do not touch the pin of plug. This may cause electric shock.
9. This refrigerator is designed solely for the purpose of storing foodstuff for domestic use in accordance with the instructions given in this manual. Using the refrigerator for other purposes might be harmful to persons or property.
10. This refrigerator is not suitable for the storage of materials requiring precise temperatures. Deterioration of these materials will be dangerous.
11. Dust deposited on the power plug may cause fire. Wipe it off carefully and occasionally.
12. Do not attempt to change or modify this refrigerator. This may result in fire, electric shock or injury.

CAUTION

1. Do not touch the compressor unit or its peripheral parts, as they become extremely hot during operation and the metal edges may cause injury.
2. If the power supply is accidentally disconnected, please wait for at least 6 minutes before re-connecting the power, as back pressure in the compressor may trip the overload relay.
3. Avoid removing food from the freezer with your bare hands. Directly touching products stored at sub-zero temperatures can result in frostbite.
4. To prevent accidental power disconnection, plug the refrigerator directly to the source. Do not use an extension cord as loss of power could lead to the spoiling of the stored food.
5. Do not place bottles in the freezer as they may crack when frozen.
6. Keep the door securely closed. If the door is left ajar, the controlled inner temperature will rise, resulting in food spoilage and increase in electricity costs.
7. Do not install the refrigerator in a damp or wet location as this may cause damage to the insulation and a leak. Condensation may also build on the outer cabinet and cause rust.
8. When installing or moving the refrigerator, make sure that you do not nip or kink the power cord. Damage of the power cord may cause electric shock or fire.
9. Do not use this refrigerator when the power cord or plug is damaged, or the outlet attachment is loose, as they may cause electric shock or fire.
10. Disconnect from the main electricity supply by removing the the electricity supply socket. Do not remove by pulling the power cord. This may cause electric shock or fire.
11. Make sure that you leave adequate ventilation space around the refrigerator to prevent the compressor from overheating and stopping. Please follow the instructions given for installation.
12. Should the power cord be damaged, it must be replaced by service agent approved by SHARP as a special cord is required.
13. In case of gas leak, ventilate the area by opening a window, etc. Do not touch the refrigerator or the power socket.
14. Do not place heavy or easily broken objects on top of the refrigerator. Objects may fall when opening or closing the refrigerator, causing injury.
15. Do not place objects containing liquid on top of the refrigerator. Spillage may cause electric shock or fire.
16. Do not drop objects inside the refrigerator or strike the inner wall. This may cause the inner surface to crack.
17. This refrigerator is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the refrigerator by a person responsible for their safety.
18. Young children should be supervised to ensure that they do not play with the refrigerator.

BEFORE OPERATION

■ Installation

Make sure there is sufficient space for ventilation.

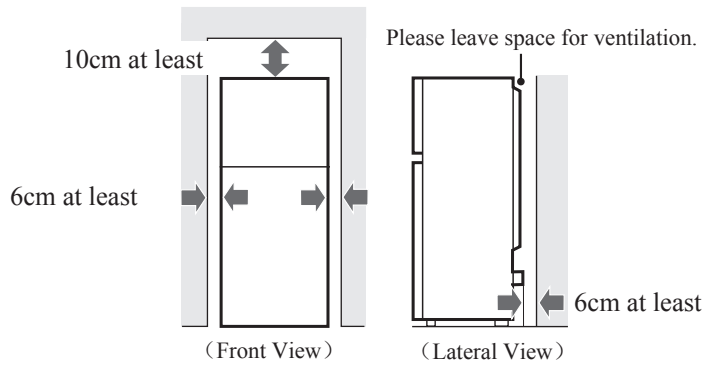 



Figure shown above is the minimum required space for installation.

Caution

- Position the refrigerator where the plug is accessible.
- Do not locate the refrigerator near any heating equipment like a gas furnace or direct sunlight, otherwise it will lead to decrease of cooling capacity and fading of color; near a TV set, radio, telephone, wired intercom, otherwise it will cause damage to fidelity and picture.
- It may dirt, change color and/or shape of the wall and ground near the refrigerator when the refrigerator releases heat. Please pave a plank on carpet or PVC floor before positioning the refrigerator.


■ Before Using

 - 1 Fix the adjustable foot (only the left one)

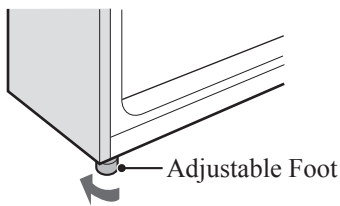

- 2 Clean the inside
- Clean with a wet cloth and wipe off the water with a dry one.

 - 3 Plug into the socket

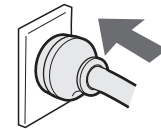

Plug into the socket after locating the refrigerator.

- 4 Do not store any food until the refrigerator starts cooling.
- Do not open the door until the refrigerator starts cooling.

 
Usually the cooling period is 2 to 3 hours, while it will last 10 hours in summer.

Caution

- Plastic odor will be smelled in the beginning. Please keep in good ventilation to remove the odor.


■ In Delivery

- Please take out all the foods inside before moving the refrigerator.
- Take out the plug.
- Put a cushion on the delivery path. Otherwise, the water spilled from the evaporation pan in delivery will dirt the floor.

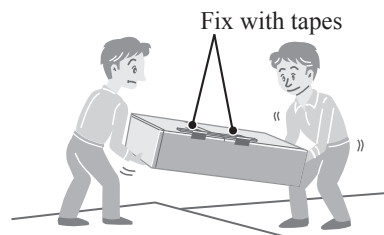

- Please lift the refrigerator up when moving since there is no casters.
- Do not locate the refrigerator laterally. Otherwise it will cause damage to mechanical parts and stop cooling.

 DESCRIPTION

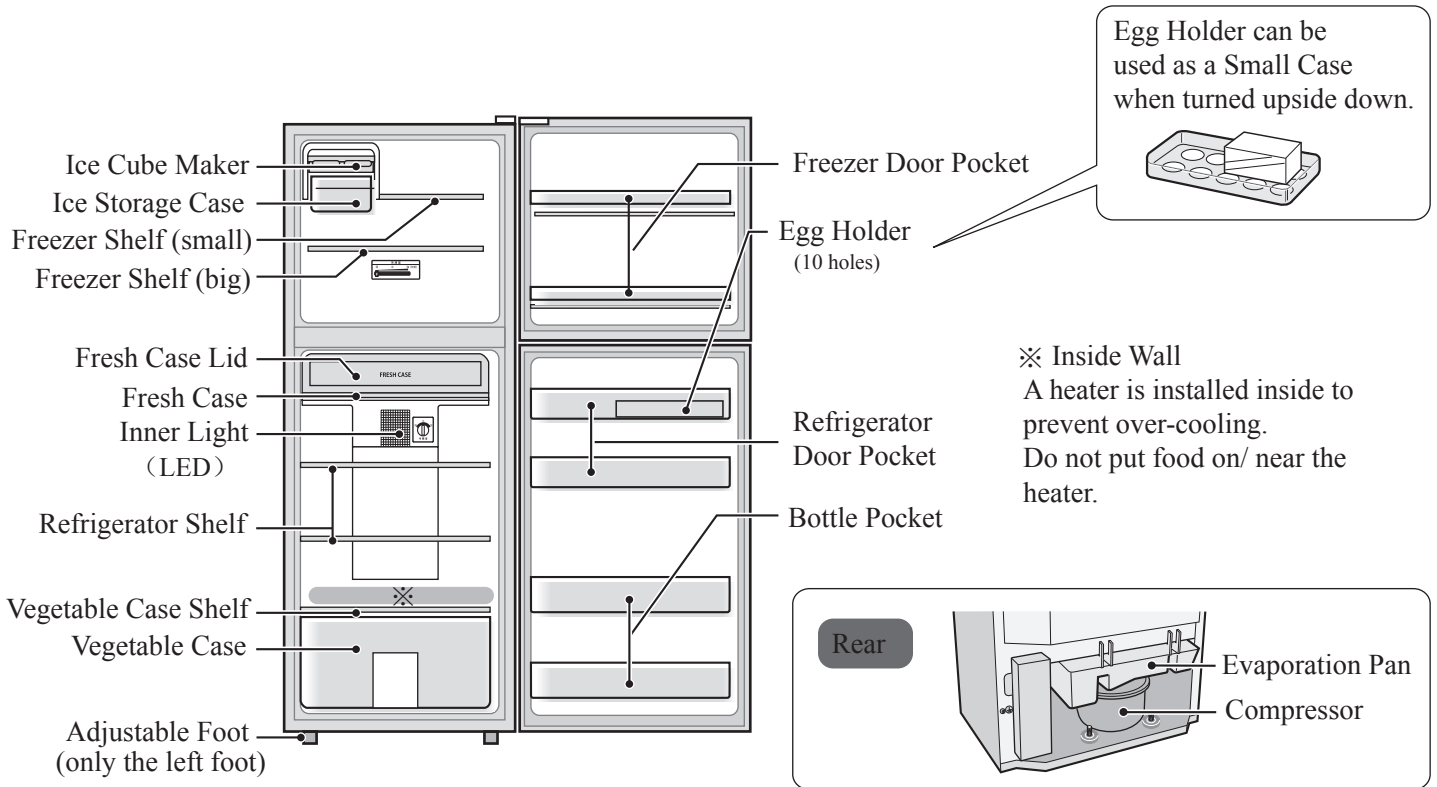


OPERATION

■ Temperature Setting

With no food inside and door closed under ambient temperature 30°C, the below temperature is measured at the bottom part of the compartments when the refrigerator comes to a stable status.

Freezer Temperature Control

 - Usually set at 「MED」
- Turn to 「MAX」 in winter (below 10°C)
If set at 「MED」 in winter, the Freezer may not work. If set at 「MAX」 in other seasons except winter, the Refrigerator may not work.



FREEZER TEMP. CONTROL

MIN	1~3°C higher than MED
MED	about -18°C
MAX	2~4°C lower than MED

- In winter, since the refrigerator temperature is not rising, and the cooling process period will be shortened, therefore the temperature in the Freezer may tend to rise.

When set at 「MAX」, more cold air will be sent into the Freezer.

Refrigerator Temperature Control

- Only used when cooling status need to be adjusted.



REFRIGERATOR TEMP. CONTROL


MIN	1~3°C higher than MED
MED	about 3~5°C
MAX	2~4°C lower than MED

- When adjusting Refrigerator Temperature Control, the temperature of Fresh Case and Vegetable Case will change accordingly.

... OPERATION

■ Food Storage

 Please store different foods into the appropriate storage compartment.

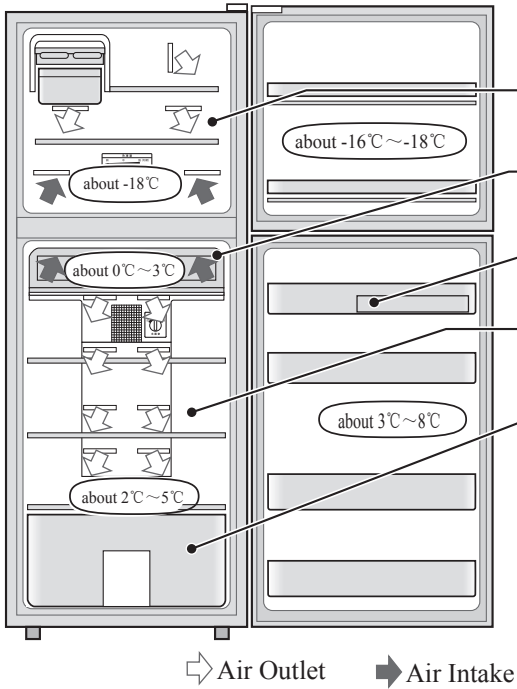

Freezer

- Store frozen food, ice cream, etc.

Fresh Case

- Store fresh food, fermented food, processed food and dairy, etc.

Refrigerator Door Pocket

- Store eggs, sauces and drinks, etc.

Refrigerator

- Store chilled foods and vegetables, etc.

Vegetable Case

- Store vegetables and fruits, etc.

 
Caution

- Do not store humid food (e.g. vegetables) in the Fresh Case, otherwise it may get frozen.
- Do not store carbonated drinks in the Freezer, otherwise it may pollute the Freezer if they get spilled.


- With no food inside and door closed under ambient temperature 30°C, the displayed temperature on the picture is the one measured when it comes to a stable status. The Temp. Control is set at 「MED」.

■ How to Make Ice Cube

- 1 Fill water in the ice tray and please do not exceed the water line.

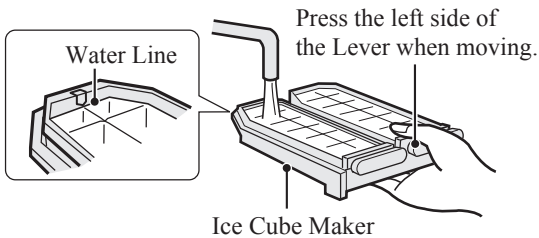

 - 2 Turn the Lever clockwise to empty the Ice Cube Tray when the ice cubes are made.

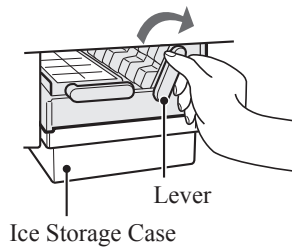


Caution


- Do not overfill the Ice Cube Maker, otherwise the ice cubes will be joined together and cannot be taken out.
- Do not make ice in the Ice Storage Case, otherwise it will get cracked.

When the Spring Drops

 
- ① Insert the Spring (the side which looks like letter "L") into the Spring Eye.

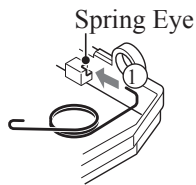

 
- ② Turn the Spring to insert the "L" part into the proper place.

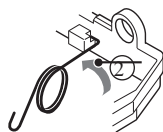

 
- ③ Insert the "L" part in thoroughly and then overlay the Spring on the Fixing Orifice.

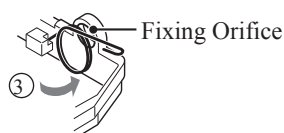

 - ④ Insert the Ice Cube Maker into the orifice and wind the Spring on the Ice Cube Maker.

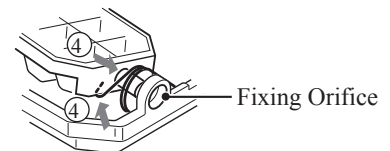

 - ⑤ Put the Ice Cube Tray on the Holder. If the sound of "crack" is heard, then it is firmly installed.

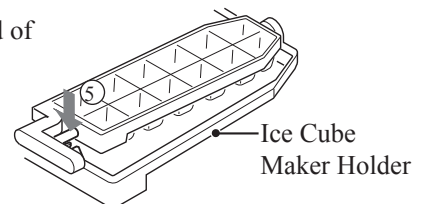

Caution

- Please avoid being cut by the fore-end of the Spring.

CARE AND CLEANING

■ Caution



- Unplug the refrigerator.
- Wipe with a soft cloth dipped with warm water or diluted neutral detergents (e.g. tableware detergent).
- If neutral detergents are used, please wipe with water again before drying. (Otherwise, the plastic components may be damaged.)



The following substance shall never be used, otherwise it will cause damage to the surface, change of shape, crack to the plastic components.

- gasoline
- diluent
- alcohol
- abrasive powder
- washing powder
- steel wool
- nylon brush
- hot water (>60°C)
- alkaline and alkalescent detergent
- substances may cause damage to the plastic components

Appendage

Take off, wash and dry before reinstallation.



Door Seal

Please be careful since it gets stained easily.

The Wall Surrounding and Adjustable Foot

 
(Please care and maintain once a year.)

The color of the wall behind may get change if it doesn't get cleaned for a long time.

How to Remove and Install

Fresh Case

Draw the Fresh Case out until reaching the ledge, lift up the inside part slightly and then take it out all.

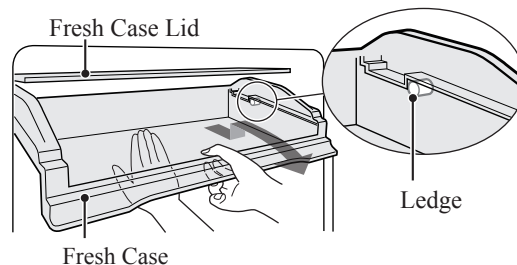


Put it on the ledge and push it along the rail when installing.
Do not remove the lid.

Door Pocket

Pull it out by lifting up.

 Make sure the hasp is fully locked.

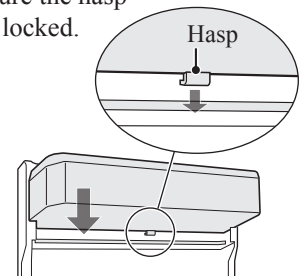

Defrosting

The refrigerator defrosts to water regularly and stores in the evaporation pan, then the water gets evaporated by the heat generated from compressor.

The Inner Light Is Broken

Please contact the service centre authorized by SHARP to replace the Inner Light. Only qualified technician can do the replacement.

Switch Off the Refrigerator

Please switch off the refrigerator if you will be not at home for a long period, take out all the foods in the refrigerator and clean the inside thoroughly. Please remove the plug from the socket and keep the doors of the refrigerator all open.

BEFORE CALLING FOR SERVICE

Before calling for service, check the following points.

It is normal for the refrigerator to produce the following sounds.

- Loud noise produced by the compressor when operation starts --- Sound becomes quieter after a while.
- Loud noise produced once a day by the compressor --- Operating sound produced immediately after automatic defrost operation.
- Sound of flowing fluid (gurgling sound, fizzing sound) --- Sound of refrigerant flowing in pipes (sound may become louder from time to time).

- Cracking or crunching sound --- Sound produced by expansion and contraction of inner walls and internal parts during cooling.
- Squeaking sound --- Sound produced by expansion and contraction of internal parts.

It is normal that the outside of a cabinet may be hot when touched. The hot pipe is in the cabinet in order to prevent dew generation.

IF YOU STILL REQUIRE SERVICE

Refer to your nearest service agent approved by SHARP.

警告



冷媒 異丁烷 Iso-butane R600a
此冰箱必須由受過訓練的技師在工場進行維修。
Maintenance work of the refrigerator must only
be carried out at workshop by well-trained
maintenance worker.

1. 本雪櫃含有易燃的製冷劑（R600a：異丁烷）和易燃的絕緣發泡材料（環戊烷）。

請遵循以下警告事項以防止著火和爆炸：

- ① 雪櫃內部及背後的製冷系統含有製冷劑，嚴禁以任何尖銳物體接觸製冷系統。
- ② 嚴禁在雪櫃內部使用其他電器。
- ③ 請看管好小孩，以免損壞液化石油氣家用雪櫃。
- ④ 切勿使用任何機械工具或其他方法來加速除霜過程（本雪櫃已經採用自動除霜系統）。
- ⑤ 不要堵塞雪櫃周圍的空間。
- ⑥ 如果雪櫃製冷系統遭到破壞並有氣體洩漏，請不要操作任何電源插座和使用明火。應打開窗戶讓空氣流通，然後聯絡SHARP認可的售後服務中心進行修理。
- ⑦ 警告標識和銘牌必須一直牢固張貼於壓縮機上和雪櫃上。使用說明書應該妥善存放。如果雪櫃要搬運到另一地方或交給回收商，使用說明書亦應該與雪櫃一併交給予處理和運送的人士。
- ⑧ 雪櫃只能使用指定規格的照明燈。
- ⑨ 雪櫃廢棄時應進行適當處理，將雪櫃送到再循環工廠對易燃的製冷劑和易燃的絕緣發泡材料進行處置。

2. 本雪櫃為密封式結構。為防止發生兒童窒息意外，請在扔棄雪櫃之前，將所有雪櫃門完全拆下。
3. 乙醚、汽油、丙烷氣、粘合劑、純乙醇等高揮發性物質和易燃性物質有爆炸之危險。請勿將這類物質保存在雪櫃內。
4. 為防止雪櫃的表面受到損壞，請勿使噴漆及塗料等接觸雪櫃。
5. 清潔雪櫃時，請勿直接將水灑在雪櫃的內部和外部。這樣會導致生鏽及絕緣性能下降。
6. 在清潔電器部件周圍時，請先拔出電源插頭以防止觸電。
7. 不慎將水灑在電路上的部件時，請先拔掉雪櫃的插頭，使該部件乾透，然後與就近的SHARP認可售後服務中心聯繫。
8. 拔出電源插頭時，請不要接觸插頭的金屬端子，因為這樣會造成觸電。
9. 本雪櫃是按照說明書所示的方法使用，為儲存家庭的食物而設計的。若將其使用於其他目的上，會對人或財產造成損害。
10. 本雪櫃不宜用來儲藏需要準確儲存溫度的物件。這類物件一旦變質，將是很危險的。
11. 電源插頭上積滿灰塵可以引起火災。因此，請時常將其擦淨。
12. 請勿嘗試改裝雪櫃。這會導致火災、觸電和其他傷害。

 
安全注意事項

1. 請勿觸摸壓縮機及其周邊部件。因為這些部件的溫度在雪櫃運行過程中會變得非常高，而且這些部件的邊角會對人造成傷害。
2. 電源因某些原因中斷時，請等至少6分鐘之後才再接上電源。因為壓縮機所承受的冷媒壓力會使過負荷繼電器跳閘。
3. 請避免光著手從冷凍室中取出食物。直接觸摸被保存在0°C以下的食物，有時會引起凍傷。
4. 為防止電源突然中斷或不穩定，請為雪櫃的插頭準備一個專用插座。由於電源不穩定會導致在雪櫃內的食物腐爛變質。
5. 因為瓶子凍結後會碎裂，因此，請勿將瓶子放進冷凍室內。
6. 請妥善關好雪櫃門。雪櫃門即使是稍微開啟，所調節的內部溫度將會升高，因而導致食物腐爛和電費增加。
7. 請勿將雪櫃放置在潮濕的環境中，因為這會對絕緣層造成傷害而導致觸電以及雪櫃外殼結露而導致生鏽。
8. 在安裝和搬移雪櫃時，請勿挾住或扭曲電源線。由於電源線的損壞有時會導致觸電和火災。
9. 當電源線和電源插頭受到損壞、或是插頭沒有被插緊時，請勿使用雪櫃。這樣可能會導致觸電和着火。
10. 切斷電源插頭時，請不要只拉扯電源線，應該拿住插頭端拔出。拉扯電源線會導致觸電和著火。
11. 為防止壓縮機過熱和停止運轉，雪櫃的周圍要留有足夠的通風空間。請參照安裝程序進行。
12. 電源線損壞時，請聯絡SHARP的維修服務中心作更換。因為需要特定的電源線。
13. 一旦發生氣體泄漏事故，請勿用手去觸摸雪櫃和插頭，要打開窗戶通風。
14. 請勿將重物和易碎物品放在雪櫃頂部。這類物品會因開關雪櫃門而掉落下來，從而導致身體受傷。
15. 請勿將裝有液體的容器放在雪櫃頂部。液體潑翻時會導致觸電或火災。
16. 在雪櫃內部要防止物體掉落並砸向內膽，否則可能會造成內膽爆裂。
17. 除非得到監護人或負責其安全人士的適當監督或指導，否則，此雪櫃不適合身體官能或心智能力退化者，或缺乏操作經驗和知識的人士（包括兒童）使用。
18. 兒童應受到適當監管，以確保不會以此雪櫃作玩具。

使用之前

■ 安裝

留出必要的空間

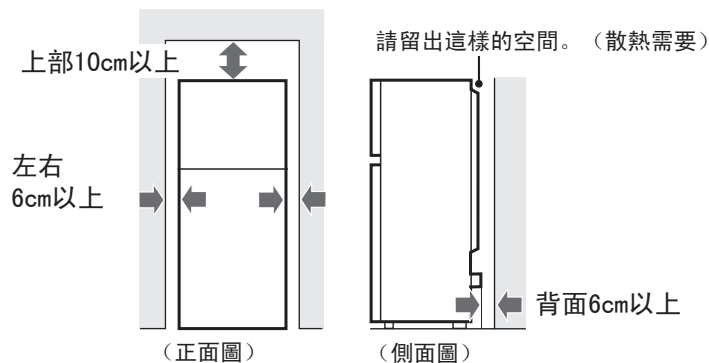


圖中所示空間尺寸為需要留出的空間尺寸最小值

請注意以下事項

- 請將雪櫃放置在有電源插座的地方
- 請勿將雪櫃放置在以下地方
煤氣爐等高溫氣體設備的附近。陽光直射的地方。
(會導致製冷能力下降和塑膠部件變色)
電視機、收音機、電話機、有線對講機的附近
(會破壞音質和畫面)。
- 由於雪櫃散熱可能會導致周圍的牆壁、地面等變髒、變色、變形。
請將結實的板鋪在地毯或聚氯乙烯地板上後再把雪櫃放在板上。

■ 開始使用前

 
1 固定可調校櫃腳 (僅左側)

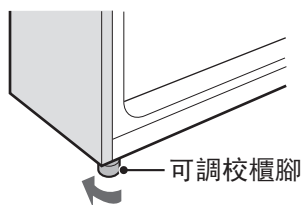

2 清潔雪櫃內部

- 擰乾濕毛巾進行擦拭。
最後用乾毛巾擦去水漬。

 3 插入電源插頭

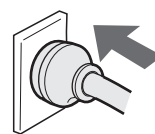

雪櫃放置好後就可以
插上電源插頭。

4 雪櫃製冷後可以放入食物

- 雪櫃還未製冷時請勿
打開雪櫃門。

 
通常情況下，雪櫃製冷時間
為2~3小時，夏天為10小時
以上。

注意事項

- 剛開始使用時可能會聞到塑膠味。
為了消除氣味請保持雪櫃周圍的
環境通風良好。


■ 搬運時

- 移動雪櫃前請取出雪櫃內
的食物。
- 拔掉電源插頭。
- 在搬運通道上鋪上保護墊等。
另外，蒸發盤中的水如果沒有
傾倒乾淨而在搬運中灑出的話，
可能會弄髒地板。

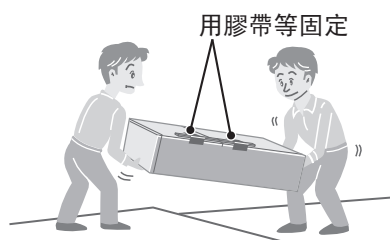


- 由於雪櫃沒有移動用的輪子而必須把它
抬起進行搬運。
- 請勿將雪櫃橫向放置。否則會導致
壓縮機發生故障而無法製冷。

 各部分名稱

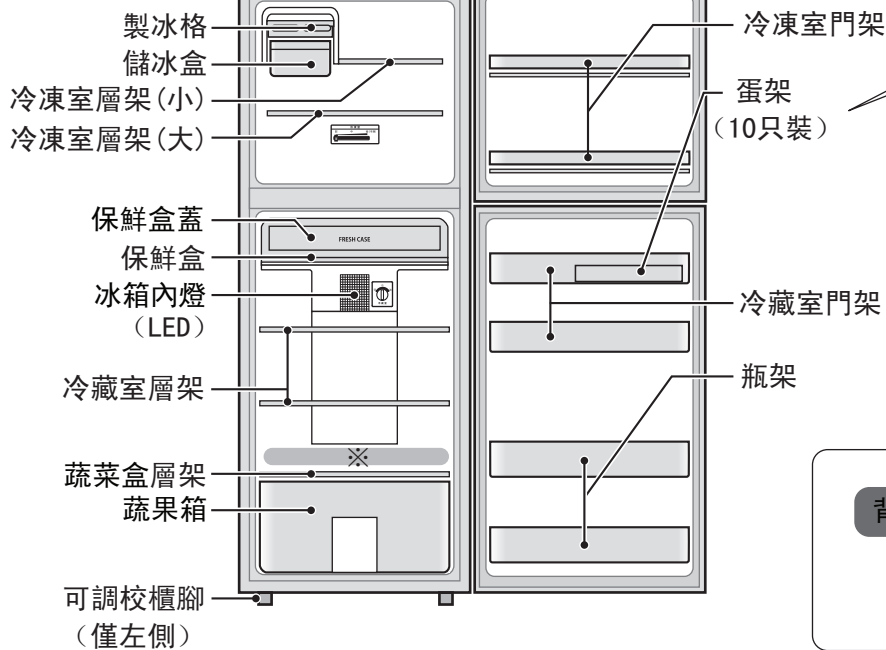


可把此架倒轉過來
用作小物架

 

※ 內壁
內側安裝了防止製冷過度的加熱器，
請勿將食物放置在加熱器的附近。

 背面

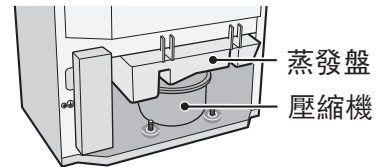


使用方法

■ 溫度調節

表中的溫度是在周圍溫度達到30°C，不放入食物並關上雪櫃門，等到溫度達到穩定狀態下測得的雪櫃內部中央偏下的溫度。

冷凍室溫度調節鈕

 - 通常設在「MED」
- 冬季(約10°C以下)時調校到「MAX」
如果冬季仍設定在「MED」，冷凍室可能會不製冷。
如果在冬季以外的季節仍設定在「MAX」
冷藏室可能會不製冷。

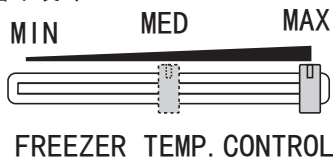


MIN	比MED溫度 高約1~3°C
MED	約 - 18 °C
MAX	比MED溫度 低約2~4°C

- 本品是以配合冷藏室的溫度進行的冷卻運作。冬季時，由於冷藏室的溫度基本不上升，冷卻運作時間減少，冷凍室溫度有上升的傾向。當設置為「MAX」時，送入冷凍室的冷氣比例上升。

冷藏室溫度調節旋鈕

 - 只在需要
調節製冷狀態時使用。

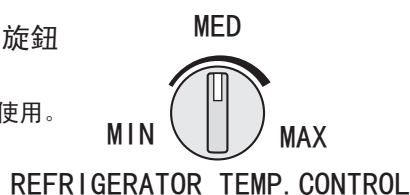


MIN	比MED溫度 高約1~3°C
MED	約3~5°C
MAX	比MED溫度 低約2~4°C

- 調節冷藏室的溫度旋鈕時，保鮮盒和蔬果箱的溫度也隨之改變。

... 使用方法

 ■ 食品的儲存

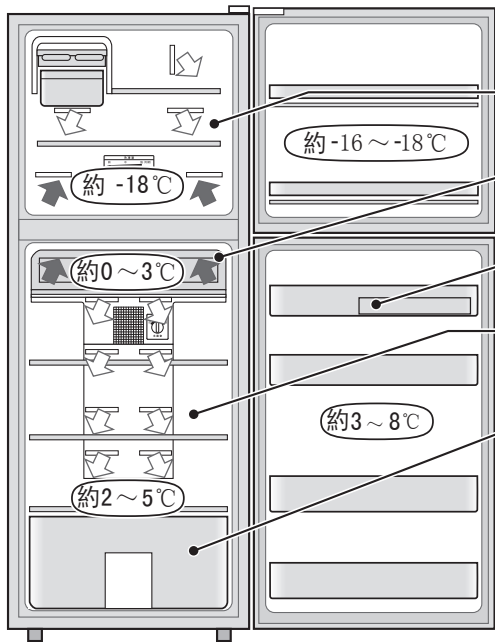

請將不同的食品放入不同的儲物空間

 
- 冷凍室**
 - 急凍食品、雪糕等。
- 保鮮盒**
 - 新鮮食品、發酵食品、加工食品、乳製品等。
- 冷藏室門架**
 - 雞蛋、調味料、瓶裝飲品等。
- 冷藏室**
 - 需冷藏食品、蔬菜等。
- 蔬果箱**
 - 蔬菜、水果等。

- 注意**
- 請勿將蔬菜等濕氣重的食品放入保鮮盒內。否則，可能會結冰。
 - 請勿將碳酸性有氣飲品放入冷凍室內。否則，可能因破裂而弄髒冷凍室。


- 左圖所示的溫度是在周圍溫度達到30°C，不放入食品並關上雪櫃門等到溫度達到穩定狀態下測得的溫度。溫度調節處於「MED」。

■ 製冰方法

1 在製冰格內注水至水位線

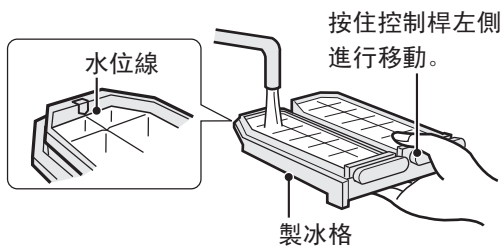

2 製冰完成後旋轉控制桿使冰塊掉落

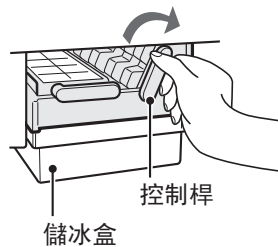 


- 注意**
- 請勿在製冰格中注入過量的水。否則，可能會導致冰塊連結一起而無法取出。
 - 請勿在儲冰盒中製冰。否則，可能會導致儲冰盒破裂。

製冰格內的彈簧脫落時


- ① 將彈簧（彎成L型的一側）插入彈簧孔中



 
- ② 轉動彈簧直到將L型部分插入到合適的位置

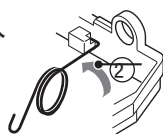


- ③ 將L型部分完全插入彈簧孔，再將彈簧重疊在固定製冰格的孔上。

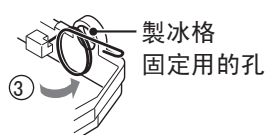 

- ④ 將製冰格插入孔中，使彈簧繞在製冰格上。

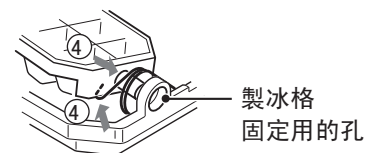 

- ⑤ 將製冰格放入製冰格支架中
聽到“啞啞”聲後說明已安裝好。

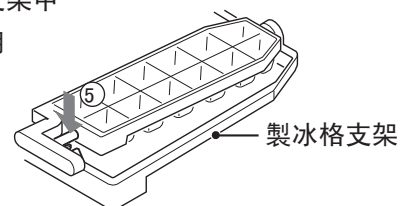 

- 注意**
- 請勿被彈簧的前端弄傷。

保養和清潔

■保養方法



- 拔下電源插頭。
- 用沾有溫水或稀釋後的中性清潔劑（餐具清潔劑）的軟布擦拭。
- 如果使用了中性清潔劑，請務必再用清水擦拭，最後擦乾。
（如果未把清潔劑擦乾淨，塑膠部件容易破裂）



請勿使用以下物品

否則，容易造成表面受損，
塑膠部件變形、破損、裂痕。

- 汽油
- 稀釋劑
- 酒精
- 研磨粉
- 洗衣粉
- 鋼絲球
- 尼龍刷
- 熱水（60°C以上）
- 鹼性、
弱鹼性清潔劑
- 其他可能損壞塑膠
的物品

附屬品

取下清洗抹乾後
再安裝。



門封條

容易被弄髒所以
應注意清潔。

可調校櫃腳及 雪櫃旁的牆壁

 
（需進行一年一次的清潔）

如果長期不擦拭灰塵，
旁邊牆壁可能會變色。

取下及安裝的方法

保鮮盒

抽出保鮮盒直到碰到突起部分，
把內側稍稍上提後再全部抽出。

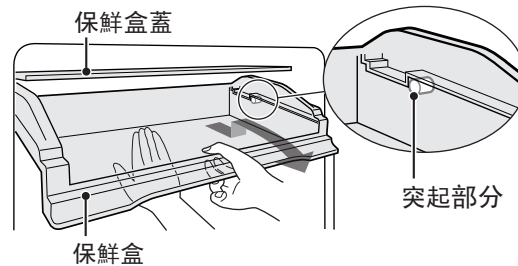


安裝時，放在突起部分上面
然後往內推。請勿取下保鮮盒蓋。

門架

向上提後取出。

 安裝時需卡緊
卡鉤。

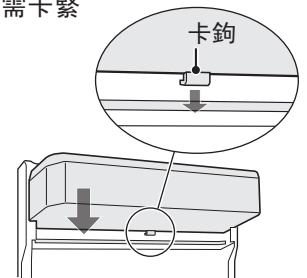

除霜

雪櫃內部的霜會定期溶解成水留在蒸發盤中，再由壓縮機等的熱量使之蒸發。

雪櫃內燈不亮時

請聯絡SHARP售後服務中心進行更換。除技術服務人員以外的人員不能進行更換。

關閉雪櫃電源時

如長時間外出而需關閉雪櫃電源時，請拿出雪櫃中的全部食物，並對雪櫃內部進行清潔。
拔下電源插頭並使兩扇雪櫃門保持打開狀態。

送修之前的初步檢查

送修之前，請對以下幾點進行確認：

雪櫃若發出下列聲音，是正常的：

- 運轉開始時，壓縮機發出較大的噪音——不久聲音會變小。
- 壓縮機每日一次發出較大噪音——緊隨自動除霜操作之後發出的運轉聲。
- 液體流動的聲音（咕嚕聲、嘶嘶聲）——製冷劑在管道內流動的聲音（聲音有時會變得較大）。

- 劈啪聲或吱嘎聲——製冷時內壁和內部零件膨脹和收縮的聲音。
 - 吱吱聲——內部零件膨脹和收縮的聲音。
- 雪櫃外箱有時會變熱，這是正常的。
因為防止結露的熱導管裝在機身的內部。

若經檢查後仍需要送修時
請與就近的 SHARP 售後服務中心查詢。

SHARP
SHARP CORPORATION

TINS-A023RDRZ 13I ①